

DEMOUNTABLE VENTILATED CEILINGS FOR COMMERCIAL KITCHENS

Cleaning recommendations



1- Protect your hands from injuries by wearing gloves.



5 – Stand or lie the cassettes in the wash tray. Leave the cassettes to dry, any excess water can be removed with a dry cloth.



2 – Lift the cassettes carefully out of the C-profiles. Handle the cassettes on the side (a) or on the small register (b) only.



6 – Use a metal polish to achieve a max. shine.



3 – Pull the cassettes to the opening until the row is empty (up to 10 cassettes possible).



7 – Place the cassettes back into the grid and push together until the row is full (max. 10 cassettes).



4 – Severely spoilt cassettes should be sprayed on both sides with a fat dissolving cleaning fluid.

